 


# INSTRUCTION MANUAL

## SPECIFICATIONS:

1. Power supply: 9V~24VDC
2. Frequency: 433.92 MHz
3. Rolling code and Fixed code,
4. 2 channel
5. Maximum storage: 400 codes
6. 94mm\*60mm\*28.5mm

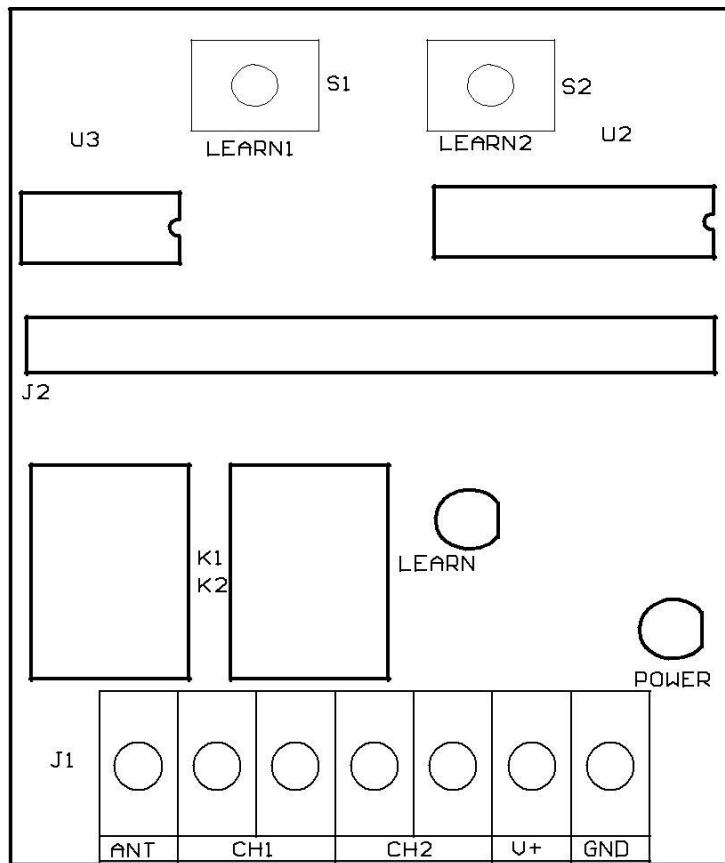

ANT	Receiver Antenna
CH1	Relay Output 1
CH2	Relay Output 2
V+	Voltage +
GND	Ground

## PROGRAMMING:

1. Learning transmitter's codes:

Press "learn 1" or "learn 2" button – Learn LED will go on. Then press the button which you wish to learn on your remote control. Learn LED will start blinking and go off – This means that you have successfully learned your remote to the receiver.

- Repeat the above steps for other transmitters.

2. Erasing transmitter's codes:

Press "learn 1" or "learn2" and keep holding until Learn LED will go off – Once Learn LED is off, it means that you have successfully erased the memory of the appropriate channel.

## FEATURES:

1. Two-way control, Relay contact output, Relay the greater flow rate of 2A
2. Can identify HS1527, PT2262, HCS301, HS2240, MIE, CAME remote controls and so on .